

MAD CATZ

VERSATILE ALL-BUTTON ARCADE CONTROLLER

N.E.K.O. K.O.


Quick Start Guide

VERSATILE ALL-BUTTON ARCADE CONTROLLER

N.E.K.O. K.O.

| | | |
|---------|-------|-------|
| ENGLISH | ----- | 01-03 |
| 简体中文 | ----- | 04-06 |
| 日本語 | ----- | 07-09 |

Button Layout & Functions

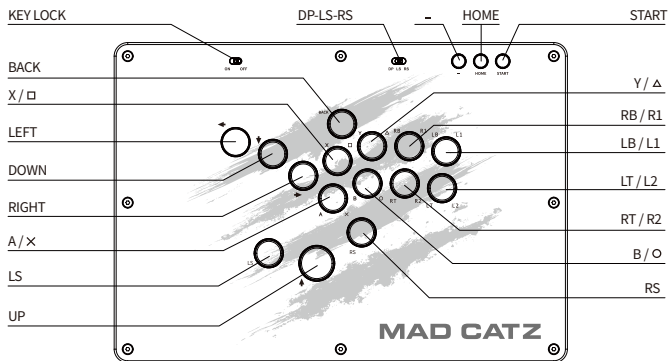

| Button | Function | PC | PS4 | Switch |
|--------------|---|----------------------------------|----------------|-------------|
| — | Various Functions Depending on Platform | / | Touchpad Press | Capture (📷) |
| HOME | Back to Home Page | HOME | PS | HOME (🏠) |
| START | Various Functions Depending on Platform | START | OPTIONS | + |
| BACK | Various Functions Depending on Platform | BACK | SHARE | — |
| A | A | A | × | B |
| B | B | B | ○ | A |
| X | X | X | □ | Y |
| Y | Y | Y | △ | X |
| RB | RB – Right Bumper | RB | R1 | R |
| RT | RT – Right Trigger | RT | R2 | ZR |
| RS | RS - Right Stick | RS | Right Stick | Right Stick |
| LB | LB – Left Bumper | LB | L1 | L |
| LT | LT – Left Trigger | LT | L2 | ZL |
| LS | LS - Left Stick | LS | Left Stick | Left Stick |
| KEY LOCK | Enable or disable “—”, “HOME”, “BACK” and “START” | ON / OFF | | |
| DP / LS / RS | Direction input mode switch | D-pad / Left Stick / Right Stick | | |

How to set it up

Windows

1. Take out the USB-A to USB-C cable from the retail box.
2. Plug the above cable into N.E.K.O. and your system.
3. X-INPUT mode is recognized in Windows by default.

Switch

1. Select “System Setting” from the HOME menu.
2. Go to “Controllers and Sensors” and choose “Pro Controller Wired Communication”.
3. Click on “OK” in the pop-up window and complete the setting.
4. Turn off the setting by clicking on “Pro Controller Wired Communication” again.

Key Lock

The Key Lock switch accesses to specific function buttons:

- OFF: “-”, HOME, START and BACK are enabled and function normally
- ON: “-”, HOME, START and BACK are disabled

Directional Input Mode

Switch the directional inputs:

- DP: D-pad input mode
- LS: Left analog stick mode (strongly recommended when playing fighting games on Switch /Switch 2)
- RS: Right analog stick mode

Input Mode Switch (PC only)

1. Default mode: X-INPUT
2. Press and hold “-” + HOME + START for 3 seconds, it switches to D-INPUT
3. Repeat the same to switch back to X-INPUT

Note: Input mode is not retained after disconnecting

Package Contents:

- N.E.K.O. K.O. Versatile All-Button Arcade Controller x 1
- 3m USB-A to USB-C Cable x 1
- Hexagon Screwdriver x 1
- Keycap / Switch Puller x 1
- QR Code for QSG x 1
- Warranty Card x 1
- Mad Catz Logo Sticker x 1

System Requirements:

Windows 7/8/8.1/10/11, PS4, Switch / Switch 2


Troubleshooting

1. Disconnect and reconnect the USB cable.
2. Try a different USB port.
3. Ensure the USB port is powered.
4. Try to reboot your system.
5. For any further advice or support, please visit www.madcatz.com.

Warning:

1. Operating voltage: DC 5.0V
2. Maximum working current: $\leq 50\text{mA}$
3. To reduce the risk of fire or electric shock, do not expose this device to water or moisture.
4. Do not modify the device as this will void the warranty and may cause unexpected damage to the device.
5. If you experience any discomfort while operating this product, stop using this device immediately. If the condition persists, seek medical attention immediately.
6. This product contains some small parts. If swallowed, it may cause choking. Therefore, it is not suitable for children under 3 years old.

产品说明

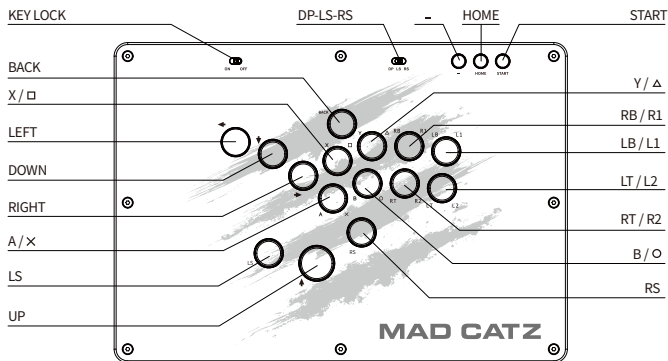

SC

| 按键名称 | 功能描述 | PC | PS4 | Switch |
|--------------|--------------------------------|------------------------------|------------|---------|
| - | 对应平台功能 | / | Touchpad下压 | Capture |
| HOME | 返回主页 | HOME | PS | HOME |
| START | 对应平台功能 | START | OPTIONS | + |
| BACK | 对应平台功能 | BACK | SHARE | - |
| A | A功能按键 | A | X | B |
| B | B功能按键 | B | O | A |
| X | X功能按键 | X | □ | Y |
| Y | Y功能按键 | Y | △ | X |
| RB | RB功能按键 | RB | R1 | R |
| RT | RT功能按键 | RT | R2 | ZR |
| RS | 右摇杆按键 | RS | 右摇杆按键 | 右摇杆按键 |
| LB | LB功能按键 | LB | L1 | L |
| LT | LT功能按键 | LT | L2 | ZL |
| LS | 左摇杆按键 | LS | 左摇杆按键 | 左摇杆按键 |
| KEY LOCK | 打开或关闭“-”、“HOME”、“BACK”和“START” | ON / OFF | | |
| DP / LS / RS | 按键模式切换 | DP-方向键模式, LS-左摇杆模式, RS-右摇杆模式 | | |

操作说明：

Windows

1. 从彩盒中拿出USB-A TO USB-C线材
2. 使用线材将N.E.K.O. 与主机连接
3. 在Windows下，默认为X-INPUT模式

Switch

1. 在Switch主机界面选择“设置”
2. 在“设置”界面选择“手柄与感应器”
3. 在“手柄与感应器”界面选择“Pro手柄的有线连接”
4. 在弹出的对话框选择“OK”，显示“开启”，即开启完成
5. 再次选择“Pro手柄的有线连接”，显示“关闭”，即表示有线连接关闭

按键锁：

按键锁为功能按键锁定开关，左为按键锁关闭，右为按键锁打开

- 按键锁关闭时，“-”，“HOME”，“START”，“BACK”按键功能打开，功能正常使用
- 按键锁打开时，“-”，“HOME”，“START”，“BACK”按键功能关闭，功能无法使用

按键模式切换：

按键模式切换为切换方向按键的输出模式

- DP: 手把十字方向键输入模式
- LS: 手把左摇杆输入模式 (强烈建议在Switch/Switch2 操作格斗游戏时，切换成LS模式)
- RS: 手把右摇杆输入模式

输入模式切换(仅PC)：

1. 预设为X-INPUT模式，连接PC后，长按「-」+HOME +START 3s切换至D-INPUT模式；再次长按「-」+HOME +START 3s切换回X-INPUT模式。
2. 输入模式无法记忆。

包装清单:

- N.E.K.O. K.O. Versatile All-Button Arcade Controller x 1
- 3m USB-A to USB-C Cable x 1
- 六角螺丝刀 x 1
- 拔轴器 x 1
- QR Code for QSG x 1
- 保修卡 x 1
- Logo贴纸 x 1

系统要求:

Windows 7/8/8.1/10/11、PS4、Switch / Switch 2


故障排除:

1. 拔掉USB, 然后将其重新插入主机的USB端口。
2. 如果可能, 尝试将产品插入另一主机的USB端口。
3. 应使用通电的USB端口。
4. 尝试重新启动主机。
5. 如需更多建议或帮助, 请访问www.madcatz.com

注意事项:

1. 工作电压: DC 5.0V
2. 最大工作电流: $\leq 50\text{mA}$
3. 为减少火灾或电击危险, 请勿使本设遭受雨淋或受潮。
4. 请勿修改设备, 否则将使保修无效, 并可能造成设备意外损坏。
5. 如果在操作本产品时感到任何不适, 请立即停止使用N.E.K.O. K.O. Versatile All-Button Arcade Controller。如果此种情形持续发生, 请及时就医。
6. 本产品包含一些小零件。如果吞入, 可能导致窒息。因此不适合3岁以下儿童适用。

ボタンの配置と機能

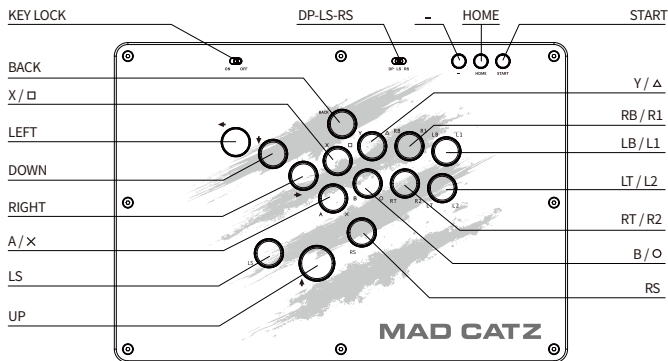

| ボタン | 機能 | PC | PS4 | Switch |
|--------------|--|----------------------------------|----------------|---------|
| — | プラットフォームに応じた様々な機能 | / | Touchpad Click | Capture |
| HOME | HOMEに戻る | HOME | PS | HOME |
| START | プラットフォームに応じた様々な機能 | START | OPTIONS | + |
| BACK | プラットフォームに応じた様々な機能 | BACK | SHARE | — |
| A | A | A | × | B |
| B | B | B | ○ | A |
| X | X | X | □ | Y |
| Y | Y | Y | △ | X |
| RB | 右バンパー | RB | R1 | R |
| RT | 右トリガー | RT | R2 | ZR |
| RS | 右スティック | RS | 右スティック | 右スティック |
| LB | 左バンパー | LB | L1 | L |
| LT | 左トリガー | LT | L2 | ZL |
| LS | 左スティック | LS | 左スティック | 左スティック |
| KEY LOCK | Enable or disable “”, “HOME”, “BACK” and “START” | ON / OFF | | |
| DP / LS / RS | 方向入力モード切り替え | D-pad / Left Stick / Right Stick | | |

セットアップ方法

Windows

1. パッケージからUSB-A to USB-Cケーブルを取り出します。
2. ケーブルを使用してN.E.K.O. K.O.コントローラーをデバイスに接続します。
3. WindowsでのコントローラーのデフォルトはX-INPUTです。

Switch

1. Switchのホーム画面から「設定」を開きます。
2. 「コントローラーとセンサー」を選択します。
3. 「Proコントローラーの有線通信」を選択します。
4. 「OK」を選択して確定します(ステータスが「ON」になります)。
5. もう一度選択すると、機能が「OFF」に切り替わります。

キーロック

キーロックスイッチは特定の機能ボタンを制御します

- OFF: 「-」、HOME、START、BACKが有効になり、正常に機能します。
- ON: 「-」、HOME、START、BACKが無効になります。

方向入力モード

方向入力の切り替え

- DP: 方向キー (D-pad) 入力モード
- LS: 左アナログスティックモード
- RS: 右アナログスティックモード

入力モードの切り替え (PCのみ)

1. デフォルトモード: X-INPUT
2. 「-」+ HOME + START を3秒間長押しすると、D-INPUT に切り替わります。
3. 同じ操作を繰り返すと、X-INPUT に戻ります。

注: 入力モードは切断後には保持されません。

パッケージ内容:

- N.E.K.O. K.O. 万能オールボタンアーケードコントローラー × 1
- 保証書 × 1
- 3m USB-A to USB-Cケーブル × 1
- Mad Catzロゴステッカー × 1
- 六角ドライバー × 1
- QRコード(クイックスタートガイド用) × 1
- スイッチ引き抜きツール × 1

システム要件:

Windows 7/8/8.1/10/11、PS4、Switch / Switch 2

トラブルシューティング:

1. USBケーブルを一度外し、再度接続してください。
2. 別のUSBポートをお試しください。
3. USBポートに電力が供給されていることを確認してください。
4. システムを再起動してください。
5. その他のアドバイスやサポートについては、www.madcatz.com をご覧ください。

警告:

1. 動作電圧 DC 5.0V
2. 最大使用電流: ≤50mA
3. 火災や感電の危険を防ぐため、本製品を水や湿気にさらさないでください。
4. 製品の改造は絶対に行わないでください。改造をすると保証対象外となり、製品に予期しない損傷を与える可能性があります。
5. 本製品の使用中に体調不良や違和感を感じた場合は直ちに使用を中止してください。症状が続く場合は、速やかに医師の診察を受けてください。
6. 本製品には小さな部品が含まれています。誤って飲み込むと窒息の危険がありますので、3歳未満のお子様には適していません。

FCC STATEMENTS

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

CANADA (IC) STATEMENTS

This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions:

- (1) This device may not cause interference.
- (2) This device must accept any interference, including interference that may cause undesired operation of the device.

L' émetteur/récepteur exempt de licence contenu dans le présent appareil est conforme aux CNR d' Innovation, Sciences et Développement économique Canada applicables aux appareils radio exempts de licence. L' exploitation est autorisée aux deux conditions suivantes :

- (1) L' appareil ne doit pas produire de brouillage;
- (2) L' appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d' en compromettre le fonctionnement.

WARNING

WARNING: This product can expose you to chemical Lead which is known to the state of California to cause cancer.
For more information, go www.P65Warnings.ca.gov.

AVERTISSEMENT: Ce produit peut vous exposer au lead qui est reconnu par l'État de Californie comme causant le cancer.
Pour de plus amples renseignements, visitez www.P65Warnings.ca.gov.

M/N [型號/型号]: N.E.K.O. K.O.

Made in China [中國製造/中国制造]

Mad Catz Global Limited 美加狮全球控股有限公司



D3D979
RoHS





MAD CATZ

www.madcatz.com